



IWI to solid floor –
insulation strategy

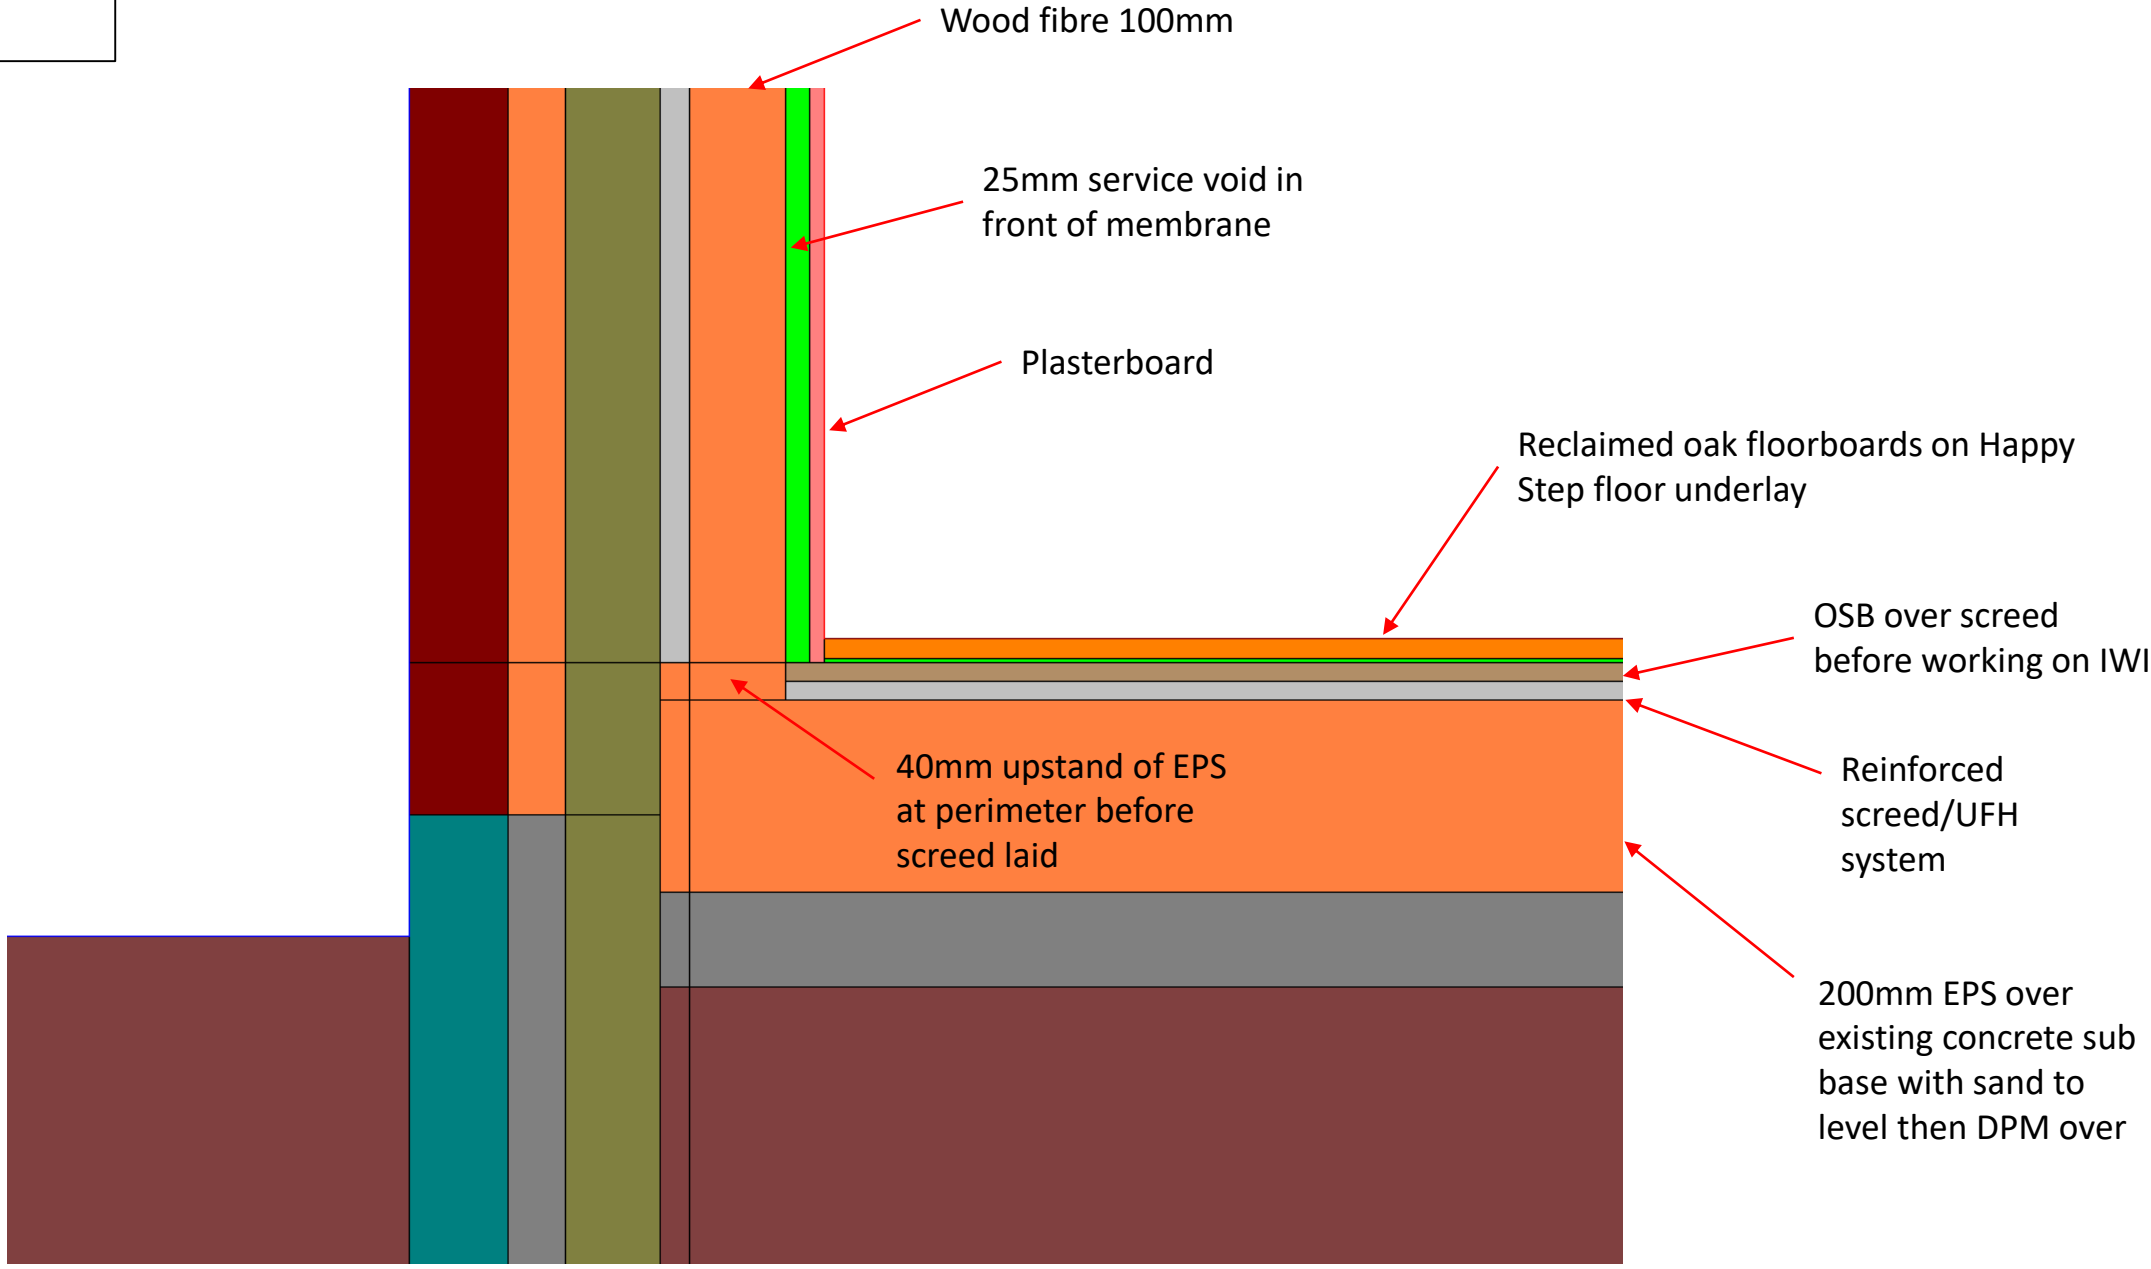

**IWI to solid floor –
airtightness strategy**

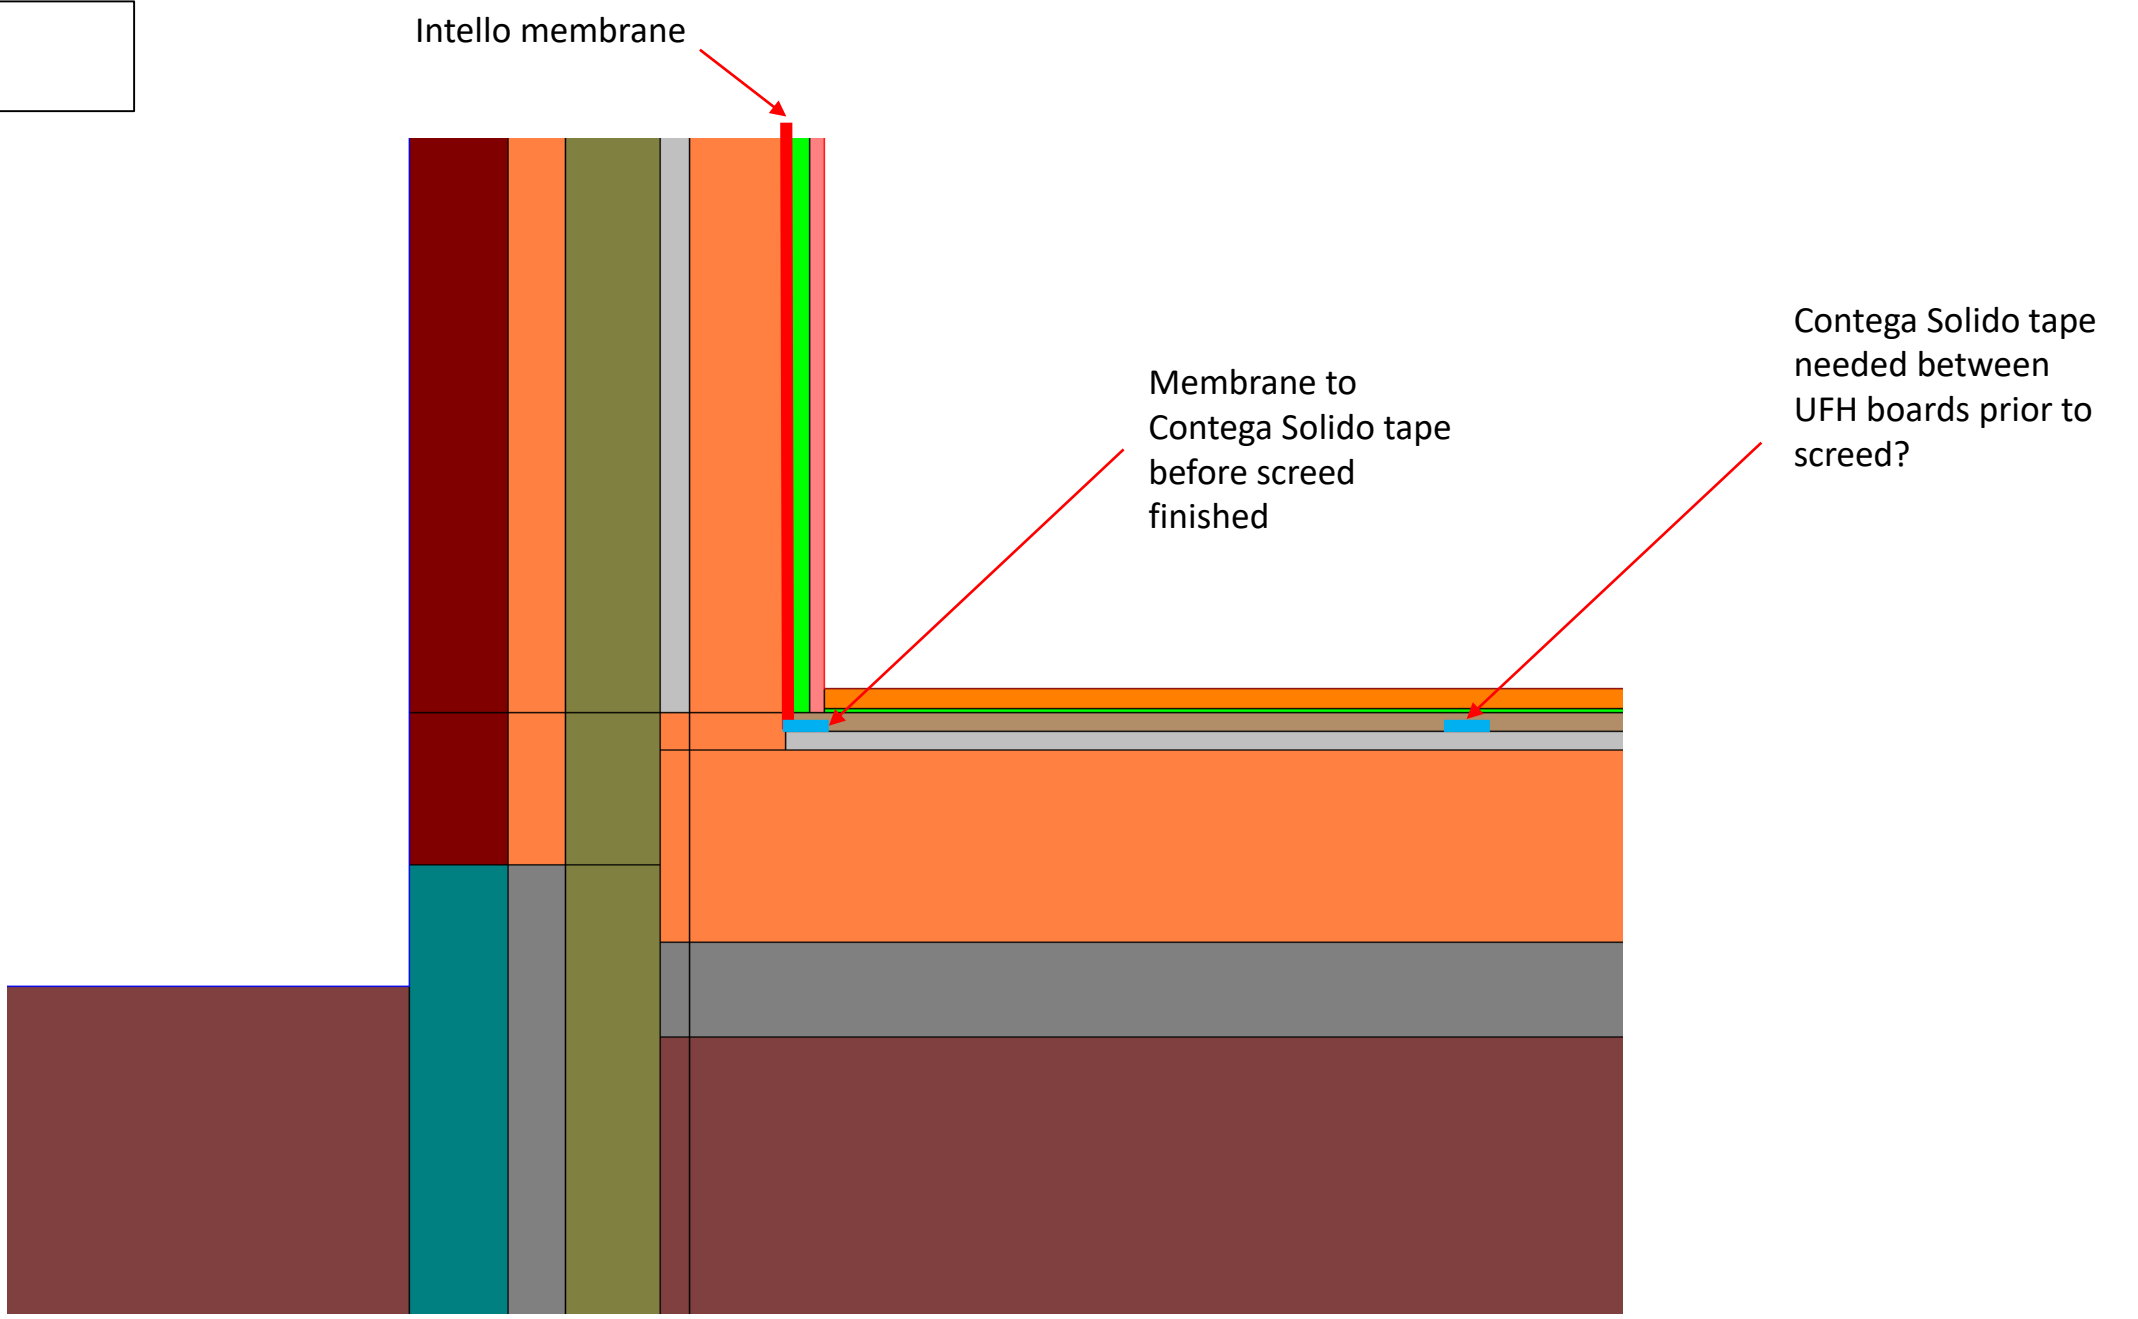

Intello membrane

Membrane to
Contega Solido tape
before screed
finished

Contega Solido tape
needed between
UFH boards prior to
screed?