


**Window – insulation strategy**

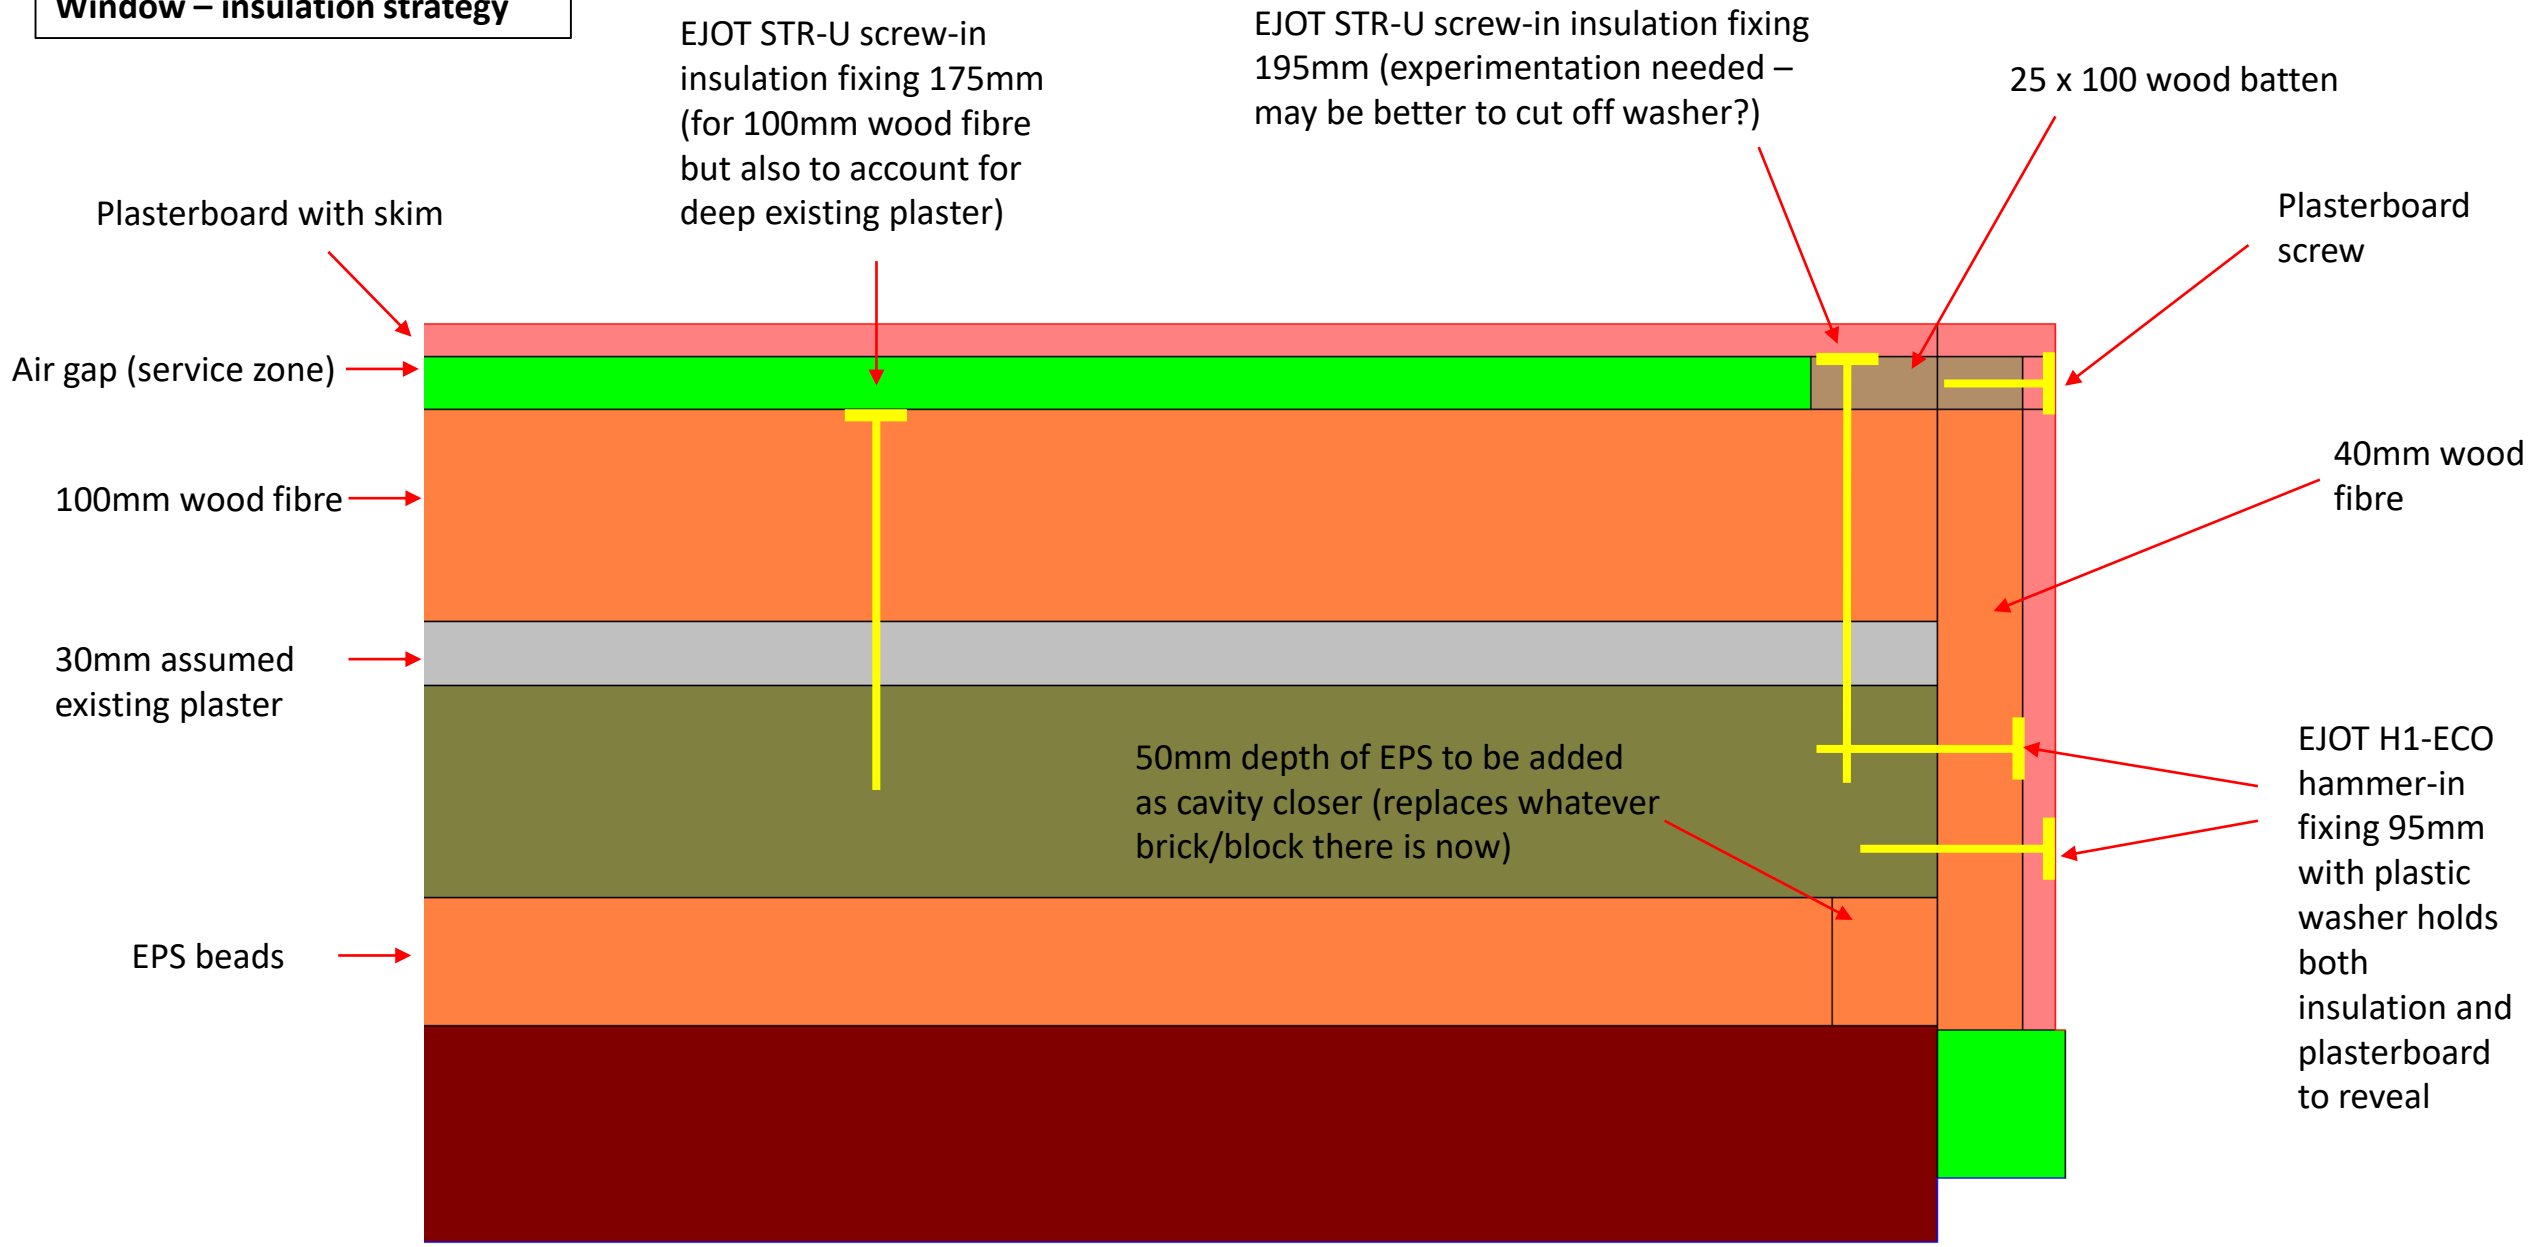

**Window – airtightness strategy**

Naidec tape after hole drilled but before concrete screw fixes batten

Intello membrane

For fixings of plasterboard to masonry, Naidec tape put on membrane after hole drilled but before fixing applied

Membrane to window frame using Tescon Profil tape

